

# Canadian Transition Period Crossbucks

Set of 5



Now includes  
peel and stick  
decals

HO Scale




**OSBORN MODEL KITS**  
www.osbornmodelkits.com

1009

Use the jig to position crossbucks. Place post in jig first then place bottom crossbuck onto post followed by top post.

### Note:

Cross buck were placed at a 60 degree angle until the early 70's after this period they changed to a 90 degree angle.

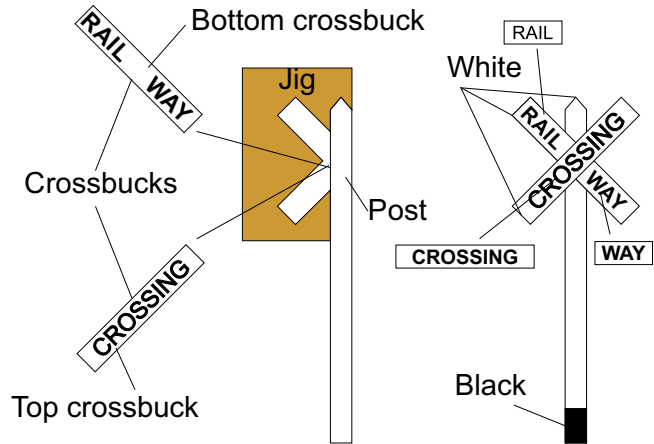

Paint the post and the crossbucks white then apply the peel and stick vinyl decals into place on the Crossbuck arms. You may use the optional dry brushing method on crossbucks arms. Avoid getting paint on words. you may need to go over the cross bucks several times to build up a good finish.